

## Failure monitoring unit



**EN** **Operating instructions**  
Please take care of the operating instructions!



**Translation from the original German version.**

All other documents in different languages are translations of the original version.

Subject to change without notice. All rights reserved in the event of registration of patents, working models or design patents.

## Table of contents

<b>1</b>	<b>General</b> .....	<b>3</b>
1.1	Information on the Assembly Manual .....	3
1.2	Standards and guidelines .....	3
1.3	Intended use.....	3
1.4	Foreseeable misuse .....	4
1.5	Warranty and liability .....	4
1.6	Customer Service - manufacturer.....	5
<b>2</b>	<b>Safety</b> .....	<b>6</b>
2.1	General safety notices.....	6
2.1.1	Structure of the safety notices .....	6
2.2	Safety principles .....	8
2.3	General duties of the operator.....	9
2.4	Requirements of the personnel .....	9
2.5	Safety notices on technical condition .....	10
2.6	Safety notices on transport, assembly, installation.....	10
2.7	Safety instructions for operation .....	11
2.8	Safety notices on electrical installation.....	11
<b>3</b>	<b>Product description</b> .....	<b>12</b>
3.1	General.....	12
3.2	Technical specifications.....	13
3.2.1	Configuration of technical parameters.....	13
<b>4</b>	<b>Assembly</b> .....	<b>14</b>
4.1	Fitting.....	14
4.2	Electrical connection.....	14
4.2.1	Function.....	14
4.2.2	Operating modes .....	15
4.2.3	Pin assignment .....	16
4.2.4	Basic circuit diagram for 4 devices .....	17
4.2.5	Fault displays.....	18
<b>5</b>	<b>Declaration of conformity</b> .....	<b>19</b>

Table of contents

---

- 6 Waste disposal ..... 20**
- 6.1 Scrapping ..... 20
- 6.2 Disposal of electrical and electronic components..... 20

# 1 General

## 1.1 Information on the Assembly Manual

The contents structure is based on the life stages of the failure monitoring system (hereinafter referred to as "device").

The manufacturer reserves the right to make changes to the technical data stated in this Assembly Manual. In individual cases they may deviate from the respective device version without the information being categorically changed or losing validity. The current state of the technical data can be obtained from the manufacturer at any time. Any claims arising herefrom may not be asserted.

Deviations from the text and image statements are possible and are dependent on the technical development, equipment and accessories of the device. The manufacturer shall provide information on any deviant details on special versions via the sales documentation. Other details shall remain unaffected thereby.

## 1.2 Standards and guidelines

During the design of the device the fundamental requirements for health and safety were applied and provision was made for the appropriate legislation, industrial standards and regulations.

The safety element is confirmed by the Declaration of Incorporation (see chapter "Declaration of Incorporation"). All information on safety in this Assembly Manual refers to legislation and regulations currently valid in Germany. All information in this Assembly Manual must be complied with at all times and to the full extent.

In addition to the safety notices in this Assembly Manual, the regulations applicable at the place of installation with regard to accident prevention, environment protection and occupational safety must be observed and adhered to. The guidelines and standards for safety evaluation can be found in the Declaration of Incorporation.

## 1.3 Intended use

The device is used to monitor the standstill (failure) of linear drives of the series Junior 2, Picolo XL, Econom 0 and Econom 1, with a rated voltage of 230 V 1 AC.

The drive series must not be combined.

A maximum of 4 devices can be operated in parallel, which can then be used to monitor up to 8 drives. Other fields of application must be agreed in advance with the manufacturer.

The device must not be used in areas where there is a risk of injury to personnel or in rooms in potentially explosive environments.

If a direct or indirect hazard to personnel cannot be ruled out, additional measures (e.g. covers, barriers, etc.) must be taken in order to minimise the potential risk accordingly.

The operator alone is liable for all damage arising from the non-intended use of the device. The manufacturer assumes no liability for personal injury and material damage caused through misuse or procedural errors, improper use and commissioning.

The device must only be operated by trained and authorised specialist staff who comply with all safety instructions.

The safe and error-free use and operating safety of the device can only be guaranteed on the basis of the intended use according to the information in this Assembly Manual.

Intended use includes observation of and adherence to all safety instructions specified in this Assembly Manual, as well as all applicable regulations of professional associations and the valid legislation regards environment protection. Adherence to the operating rules prescribed in this Assembly Manual also form part of the intended use.

### **1.4 Foreseeable misuse**

Installation deviating from the intended purpose approved by the manufacturer is considered foreseeable misuse.

### **1.5 Warranty and liability**

In principle, the General Terms & Conditions of Sale and Delivery of the manufacturer apply. The Terms & Conditions of Sale and Delivery form part of the sales documentation and are transferred to the operator upon delivery. Liability claims for personal injury and material damage shall be excluded if they are the result of one or more of the following causes:

- Non-intended use of the device
- Improper assembly, commissioning or operation of the device
- Changes to the design and construction of the device without written permission from the manufacturer

- Operating the device with improperly installed connections and defective or improperly installed safety and protective equipment
- Non-compliance with safety regulations and notices in this Assembly Manual
- Exceeding the limits of the specified technical specifications

### 1.6 Customer Service - manufacturer

The device must only be repaired by the manufacturer in the event of a fault. The address to send the device to customer service can be found on the inside of the back page.

If you have not purchased the device directly from elero, please contact the manufacturer of the machine or the supplier of the device.

Mechanically secure the system before disassembling the device. The device must not be separated from the system by force.

## 2 Safety

### 2.1 General safety notices

This Assembly Manual contains all safety notices that must be observed to avoid and prevent risks when working with the device in the individual life cycles. Safe use of the device is guaranteed when all the specified safety notices are adhered to.

#### 2.1.1 Structure of the safety notices

The safety notices in this document are identified with safety symbols and designed in accordance with the SAFE principle. They contain information on the type and source of risk, the possible consequences, as well as the prevention of the risk.

The following table provides a description of the degrees of risk with possible physical injury, as they are used in this Assembly Manual.

Symbol	Key word	Meaning
	DANGER	Warns of an accident that will occur if the instructions are not followed, which may lead to life-threatening, irreversible injuries or death.
	WARNING	Warns of an accident that may occur if the instructions are not followed, which may lead to serious, perhaps life-threatening, irreversible injuries or death.
	CAUTION	Warns of an accident that may occur if the instructions are not followed, which may lead to minor, reversible injuries.

The following table describes the symbols used in the present Assembly Manual, which are used for the graphic display of danger situations in connection with the symbol for the degree of risk.

Symbol	Meaning
	Risk of electrical voltage or electric shock: This symbol refers to risks associated with electrical currents.
	Risk of crushing and killing persons: This symbol refers to dangers associated where the entire body or individual limbs may become crushed or suffer injury.

The following table describes the situations used in this Assembly Manual where damage may occur to the product or refers to important facts, states, tips and information.

Symbol	Key word	Meaning
	<i>CAUTION</i>	This symbol warns of possible material damage.
		This symbol refers to important facts and states, as well as to further information in this Assembly Manual. Furthermore, it refers to specific instructions which give additional information on or provide assistance in performing a process in a simpler manner.

The following is an example of the structure of a safety notice:



### **DANGER**

Type and source of hazard

Explanation of the type and source of hazard

- Measures to avoid danger.

### 2.2 Safety principles

The device is built according to state-of-the-art technology and the generally accepted safety standards. The device is safe to operate. During the design of the device, the fundamental requirements for health and safety were applied and provision was made for the appropriate legislation, industrial standards and regulations. The safety of the device is confirmed in the Declaration of Incorporation.

All details pertaining to safety relate to the regulations from the European Union, which are valid at this time. In other countries the operator must ensure that the relevant laws and national regulations are adhered to.

In addition to the safety notices in this Assembly Manual, the generally applicable regulations regarding accident prevention and environmental protection must be observed and complied with.

The device must only be used when in perfect working order, for its intended use, and in compliance with the safety notices in this Assembly Manual. The device is designed for the application stated in the chapter "Intended use". In the event of non-intended use, injury to the life and limbs of the user or a third party may result or the device may be impacted or other material damage caused. Accidents or near misses during use of the device which led or could have led to personal injuries and/or damage in the work environment must be reported directly to the manufacturer with immediate effect.

All safety notices specified in the Assembly Manual and on the device must be adhered to. In addition to these safety notices, the operator must ensure that all national and international regulations applicable in the respective country of use, as well as other binding regulations on operational safety, accident prevention and environment protections, are complied with. All work on the device must only be performed by trained and authorised personnel who have received the appropriate safety instructions.

### 2.3 General duties of the operator

- The operator is obliged to only operate the device in a fault-free and operationally safe working condition. He must ensure that, in addition to the safety notices in the Assembly Manual, the generally accepted safety and accident prevention regulations, the specifications of DIN VDE 0100 and the provisions on environment protection in the respective country of application, are observed and complied with.
- The operator is responsible that all work with the device is performed by trained and authorised personnel who have received the appropriate safety instructions.
- Ultimately responsible for accident-free operation is the operator of the device or the personnel authorised by the operator.
- The operator is responsible for adhering to the technical specifications.

### 2.4 Requirements of the personnel

- Each person who is commissioned to work with the device must read and understand the Assembly Manual in its entirety before he/she carries out the respective work. This also applies if the assigned person has previously worked on such a device or was trained to do so.
- All work on the device must only be performed by trained and authorised personnel who have received the appropriate safety instructions. Before starting any operations, personnel must be made aware of the hazards involved in handling the device.
- All persons must only perform work according to their qualifications. The areas of responsibility of the respective personnel must be clearly specified.
- Any personnel who have been commissioned to work with the device must have no physical limitations, limitations on attention or judgement, whether temporary or permanent (e.g. due to overtiredness).
- Minors or persons who are under the influence of alcohol, drugs or medication, are prohibited from working with the device, as well as performing all assembly, disassembly and cleaning work.
- Personnel must wear the suitable personal protective gear appropriate to the work and present work environments.

### 2.5 Safety notices on technical condition

- The device must be checked before installation for damage and proper condition.
- The operator is obliged to only operate the device in a fault-free and operationally safe working condition. The technical condition must always comply with legal requirements.
- If risks to persons or changes in the operational behaviour are detected, the device must be shut down immediately and the incident reported to superiors or operator.
- The device may only be connected to the energy supply lines intended and designed for this purpose. The permissible type of voltage and operating voltage are stated on the type plate.
- No changes, extensions or retrofitting may be performed to the device without the approval of the manufacturer.

### 2.6 Safety notices on transport, assembly, installation

Responsibility for the transport of the device principally rests with the respective transport company. The following safety requirements must be complied with during transport, assembly and installation of the device.

- When transporting the device, it should be secured according to the instructions accompanying the means of transportation employed.
- Only the point defined on the device may be used as a securing point. (fitting on mounting rail).
- In principle, assembly and installation may only be conducted by trained and qualified personnel.

### 2.7 Safety instructions for operation

- The operator of the device is obligated to ensure the safe and proper state of the device before the initial commissioning.
- This is also necessary during the operation of the device at regular intervals determined by the operator.

### 2.8 Safety notices on electrical installation

- All work on electrical connections must only be performed by authorised electricians in accordance with the applicable regulations and provisions of the trade association, in particular the specifications in accordance with DIN VDE 0100. Furthermore, the national statutory regulations of the respective country of application must be observed.
- In the event of defects such as loose connections or defective or damaged cables, the device must not be operated.
- In the event of faults with the electrical equipment, the device must be shut down immediately.
- The device must be switched off before inspection, assembly and disassembly work.
- The device must not be hosed down with a high-pressure cleaner or a steam blaster.

The following must be checked before connecting the device to the power supply:

- Are all electrical connections, safety devices, safeguards, etc. properly installed, connected and earthed?
- Is the intended power connection designed according to the specifications in the electrical circuit diagram (voltage type, voltage level)?
- Has the supply line been isolated?

### 3 Product description

#### 3.1 General

The device is used to monitor the standstill (failure) of linear drives of the series Junior 2, Picolo XL, Econom 0 and Econom 1, with a rated voltage of 230 V 1 AC.

Use of the device is permitted exclusively for these drive series with voltage versions 230 V 1 AC, 50 Hz and internally connected limit switches.

The drive series must not be combined.

Either 1 or 2 drives can be connected to each device.

A maximum of 4 devices can be operated in parallel, which can then be used to monitor up to 8 drives.

For this purpose, the devices are connected for synchronisation via a single-wire line (cascading), the complete length of which must not exceed 1 m. The cross-section of the single-wire must not be smaller than 0.75 mm<sup>2</sup>.



Parallel operation requires drives from the same series with the same stroke length and the same speed.

Use the specified part numbers when ordering the device for monitoring the standstill (failure) of linear drives of the following series.

Drive series	Part number
Junior 2 Picolo XL Econom 0	75223230 X with monitoring contact 75865180 X without monitoring contact
Econom 1*	75223270 X

Tab. 1 Part numbers of failure monitoring system

\* Econom 01 upon request.

## 3.2 Technical specifications



All information in this chapter refers to an ambient temperature of 20 °C.

### 3.2.1 Configuration of technical parameters

Technical specifications	Failure monitoring system for Junior 2 Picolo XL Ecomom 0	Failure monitoring system for Econom 1
Rated voltage	230 V 1 AC, 50 Hz	
Rated current	3 A	4 A
Power	690 VA	920 VA
Duty cycle	S3 15%	
Weight	approx. 110 g	
Housing	Plastic	
Dimensions (L x B x H)	approx. 95 x 70 x 60 mm	
Protection class	IP 20	
Operating temperature range	-20 °C to +80 °C	
Airborne noise emission	< 70 dB(A) <sup>1)</sup>	

Tab. 2 Technical parameters

<sup>1)</sup> 1 m distance; 1.6 m above unit; nominal operation; measuring tolerance 10 %



### CAUTION

Damage to the device through incorrect operation.

- When activating the device, a pause time of at least 0.5 seconds must be observed between shutdown and reactivation.
- A pause of at least 1 s must be observed if the direction is changed.

### 4 Assembly



#### **WARNING**

Risk of injury by electrical current.



Electric shock possible.

- Electrical work must only be performed by an authorised electrician.
- 



#### **WARNING**

Risk of life-threatening injury caused by faulty electrical connection.



Electric shock possible.

- Electrical work must only be performed by an authorised electrician.
- 



#### **CAUTION**

Damage to the device through incorrect assembly

- Observe the protection class.
- 

#### 4.1 Fitting

The device is intended for installation in a switchgear cabinet or switch cabinet. It is fitted on a mounting rail.

#### 4.2 Electrical connection

The device must be connected according to the circuit diagram.



Only drives with rated voltage 230 V 1 AC, 50 Hz and internally connected limit switches must be connected.

##### 4.2.1 Function

The device monitors operation of the connected drives. As soon as a drive no longer runs, the other drives are also stopped. A distinction is made in this regard between limit position shutdown, congestion or thermal shutdown.

In the case of shutdown when the limit position is reached, the other drives are provided with a coasting time to compensate for small travel differences.

In the other cases, all connected drives are shut down immediately. As up to 4 devices can be operated in parallel, the shutdown at the other devices is effected via the SYNC lines.

Immediate shutdown in case of:

- Wire break in N conductor to drive
- Congestion of drive
- Power supply failure at cascaded device
- Thermal shutdown (overheating)

Shutdown with coasting in case of:

- Limit position reached
- Wire break in de-energised direction



If there is already a fault in a drive during activation, the other drives still run for up to 1 s before the device detects the fault and shuts down.

## 4.2.2 Operating modes



### **CAUTION**

Damage to the device

- The operating modes may only be adjusted when the device is in an idle state.



The sliding switches for adjusting the operating modes are located at the top on the device.

By adjusting the sliding switches on the device a choice can be made between two operating modes.

Switch setting	Meaning
	Both drives run (sliding switch at "2", M1 + M2 run).
	Only drive 1 moves (sliding switch at "1", M1).

Tab. 3 Switch setting

## 4.2.3 Pin assignment



### CAUTION

Damage to the device

- Actuate the slide switch only when de-energised.



If only one drive is connected to the device, it must be connected to M1 and the slide switch must be switched to position 1.

For commissioning proceed as follows:

1. Connect the drives to the device according to the circuit diagram.
2. Set the operating mode at the slide switch.

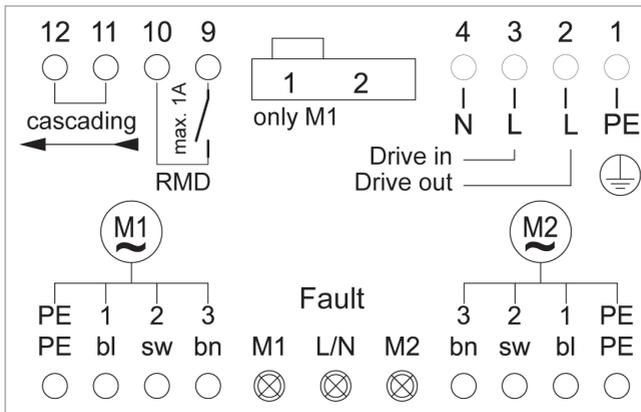



Abb. 1 Connection diagram

Connecting terminal	Function
1	Protective earthing conductor
2	Conductor for moving out
3	Conductor for moving in
4	Neutral conductor
9	Monitoring contact fault (maximum 24 V DC / 1 A)
10	Monitoring contact fault (maximum 24 V DC / 1 A)
11	Connection to further devices (SYNC line)
12	Connection to further devices (SYNC line)

Tab. 4 Pin assignment

Drive cables identified by numbers or colours are connected corresponding to the labelling on the device

4.2.4 Basic circuit diagram for 4 devices

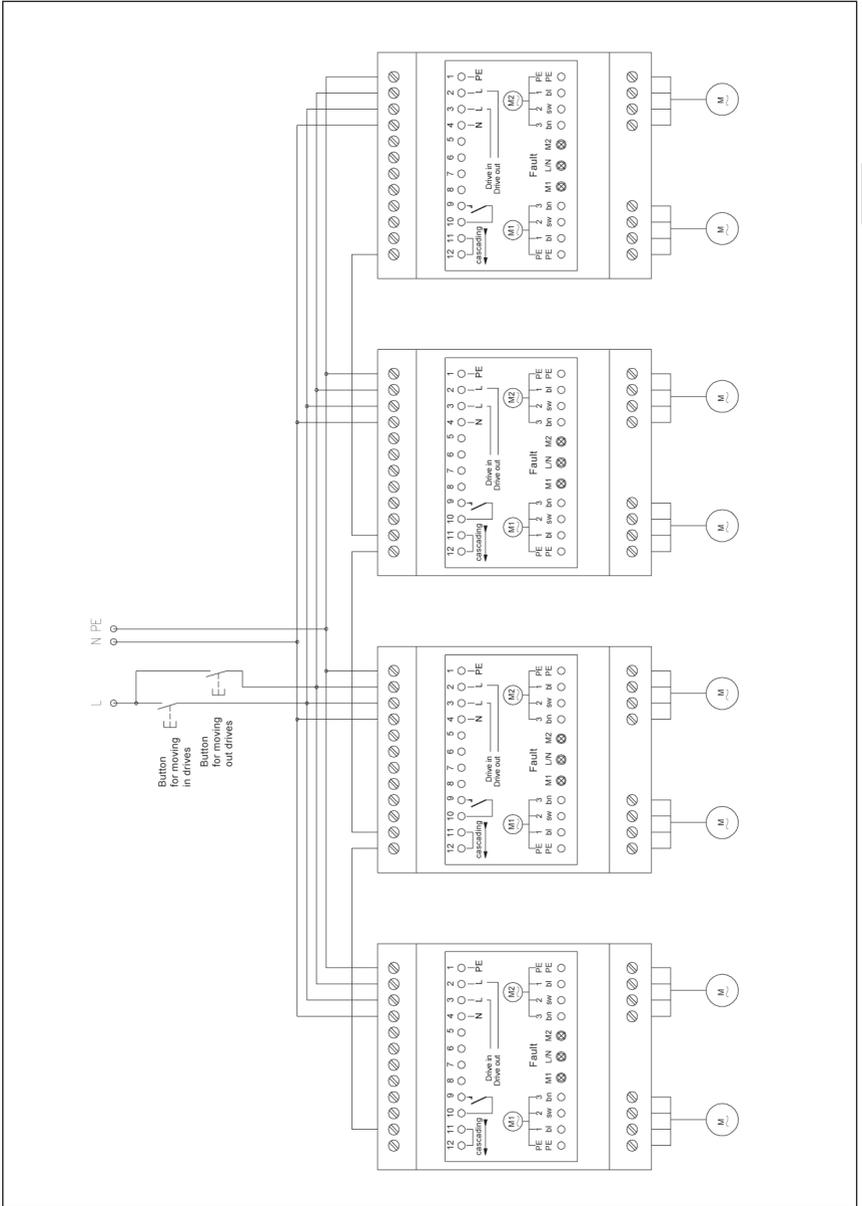

### 4.2.5 Fault displays

Functions of LEDs:

The device has 3 LEDs for displaying the cause of the shutdown. The red LED indicates that the L- and N-conductors have been interchanged in one of the devices of the drive group. This status should only be allowed to exist for a limited period due to the resultant thermal load on the devices.

The yellow and green LEDs have the following function:

- Fast flashing of the LED of the respective drive:  
shutdown through thermo switch or N-conductor break
- Fast alternating flashing of both LEDs:  
shutdown via SYNC input from another device
- LED of the drive at the limit position is continuously lit (possibly of both drives):  
shutdown through internal limit switches

Function of monitoring contact fault:

The contact is designed as a normally open (NO) contact. In the event of a fault the contact is closed and remains active even with loss of the mains voltage. The signal is only cancelled when the mains voltage is switched on again.

The contact is switched in the event of the following faults:

- Wire break in N conductor to drive
- Congestion of drive
- Power supply failure at cascaded device
- Thermal shutdown
- Wire break in de-energised direction
- Shutdown via SYNC input or shutdown by cascaded device

### 5 Declaration of conformity



The complete declaration of conformity can be downloaded from our website:  
[www.elero-linear.de/downloads](http://www.elero-linear.de/downloads).

# 6 Waste disposal

## 6.1 Scrapping

When scrapping the device, adhere to the international, national and local rules and regulations valid at the time of scrapping.



Ensure that material reusability, removal and separation of materials and sub-assemblies are also taken into consideration as there are also risks to the environment and health during recycling and disposal.

Material groups, such as plastics and metals of different types, must be sorted before submitting to the recycling and disposal process.

## 6.2 Disposal of electrical and electronic components

Disposal and recycling of electrical and electronic components must be carried out in accordance with the relevant laws and national directives.

**elero GmbH**

Naßäckerstraße 11

07381 Pöbneck

Germany

T +49 3647 46 07-0

F +49 3647 46 07-42

[info@elero-linear.de](mailto:info@elero-linear.de)

[www.elero-linear.com](http://www.elero-linear.com)